

PROTIMER Moisture Meters

Model BLD2000

- Pin style indicator
- Range of 6.0 to 90.0 WME (wood moisture equivalent)
- For wall, wood inspections
- Complete with soft case, Calchek standard and wood essence table

Model BLD5360

The surveymaster SM

- Dual function indicator
- The SEARCH mode enables the user to distinguish moisture with a radio-frequency measurement (no need to open the wall).
- In the MEASURE mode the meter can be used with a two-pin head-and-lead for awkward corners and under work surfaces
- Range of 6.0 to 99.9 WME (measure) or with color coded bars (search)
- Complete with soft case, deep wall probes (BLD5018), moisture probe, Calcheck standard and wood essence table

Model BLD5760

- Non-invasive moisture meter
- Range 0-999 relative
- Dual display LCD and LED
- Hold reading feature
- Depth of measurement - up to 3/4"
- Shipped with case - pouch with belt loop and 9V battery

Model BLD5800

The MMS (with data logging)

- Multifunctions meter, complete measurement system
- Hygrometer, moisture meter with SEARCH and MEASURE modes, surface condensation indicator
- Complete with soft case, Hygrostick probe (humidity-temperature), deep wall probes (BLD5018), surface temperature probe, Calcheck standard and wood essence table.

Code	Price
BLD2000	\$ 315.00
BLD5360	\$ 825.00
BLD5760	\$ 520.00
BLD5800L	\$ 1575.00



PTC Durometers

Analog models

- Base 1" x 1-5/8"
- Types ASTM A, B, C, D, DO, O & OO
- Easy to read 240° dial with standard maximum pointer
- Accuracy ± 1 point
- Conform to ASTM D2240 norms
- Complete with test block, NIST certificate available (extra)



Popular models

Code	Description	Price
306L-A	Type A, 35° flat cone indenter	702 \$
307L-D	Type D, 30° point indenter	702 \$

Digital models

- Base of 1/2" dia
- Types ASTM A, B, C, D, DO and O
- Accuracy ± 1 point, resolution of 0.1 point
- Digital output for PC
- Complete with test block, 10 points NIST certificate, 110 Vac adapter, batteries and carrying case



Code	Description	Price
211	Type A, 35° flat cone indenter	\$ 1692
212	Type D, 30° point indenter	\$ 1692

FAST-HEAT and CHEVRIER Heating Elements

- Made to order
- Band heaters
- Cartridge heaters
- Standard or High-Temperature
- 120, 240, 480 Vac
- Strip heaters
- Thermoplunger elements (Caloritech)
- Accessories : electrical wire, tape, high temperature plugs, etc.

To order specify (as needed) :

- Diameter
- Total length
- Leads length
- Total width
- WATTAGE (always important)
- VOLTAGE (always important)
- Type and position of plug
- Special option and quantities




Upon receipt of your request or order we will quickly confirm unbeatable prices. We promise the quickest delivery we can.

ACROLAB Thermocouples

For the plastic industry

Model A500J

- Type J T/C with bayonet
- Adjustable immersion length, 3/16" dia
- A500 : Amored leadwire
- A510 : SS braided leadwire
- Connectors : male plug (1), female plug (2) or stripped wire leads with spade lugs (3)

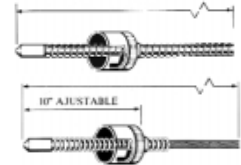

To order

- A500J + leadwire length + connector
- A510J + leadwire length + connector


Most popular models

Code	Description	Price
A510J363	36" leadwire, spade lugs	\$ 27
A510J483	48" leadwire, spade lugs	\$ 29
A510J723	72" leadwire, spade lugs	\$ 33
A510J963	96" leadwire, spade lugs	\$ 36

ACROLAB Thermocouples

- T/C type J, K, E, R, S, T and RTD probes
- 1/16" to 3/8" dia
- Length from 1" to 60" (or more)
- Stainless steel 304, 316, Inconel
- With or without leadwire, with or without connector, angled, etc.

MADE TO ORDER

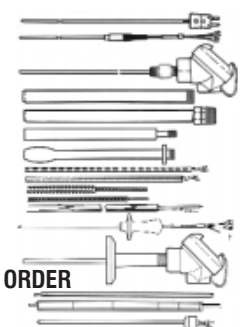

Popular models with aluminum screw cover head

Code	Description	Price
J4903.5G0032	Type J probe, 1/4" x 3.5" long, 1/2" npt fitting to insert into 4" thermowell	\$ 74
J4905.5G0032	Type J probe, 1/4" x 5.5" long, 1/2" npt fitting to insert into 6" thermowell	\$ 79
S3G4	304SS thermowell 4" long	\$ 27
S3G6	304SS thermowell 6" long	\$ 33

Numerous other models and configurations available!